


Genau Stride V Electric Treadmill

User Manual

This translation was made automatically.

THANK YOU FOR YOUR PURCHASE!

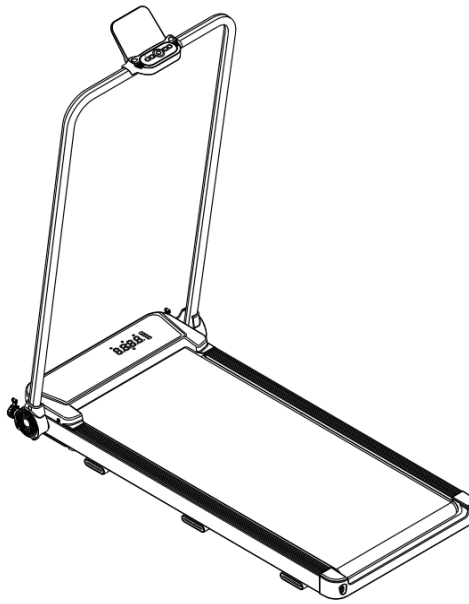

Thank you for purchasing the Genau Stride V treadmill. Please use the equipment correctly to ensure your safety and health. Read the information below carefully before use.

Please read this manual before assembling and using the treadmill.

As part of our commitment to continuous improvement, the product may be updated when necessary without prior notice. If this manual does not match the product, the actual product takes precedence.

SAFETY INSTRUCTIONS

The translation of this section has not been reviewed yet. The official text is in Russian.

Attention! Read the user manual before using the equipment. Keep this manual for the entire service life of the equipment.

Warning!

Before starting any fitness program, you should have a medical examination, especially if you:

- have high blood pressure, high cholesterol, diabetes, chronic respiratory disease or heart disease;
- have a family history of any of the above conditions;
- are pregnant;
- are over 35 years old;
- smoke and/or are obese;
- have not exercised regularly in the past year;
- have other chronic diseases or physical impairments, or are taking any medication.

If you experience dizziness, chest pain, nausea or any other abnormal symptoms while using the treadmill, stop exercising immediately. Consult a doctor before continuing.

Intended Use

- This model can be used for running or walking.
- Suitable for home use.

Note: Using the equipment for commercial or medical purposes is prohibited. All fitness equipment is intended for home use only and must not be used in commercial or public areas.

General Precautions

Indoor use only

The treadmill is suitable only for dry and clean rooms. Keep it away from moisture, dust and direct sunlight. Do not place the equipment near sources of heat or water, such as in a bathroom or kitchen.

Electrical safety

- Use only grounded outlets and do not share the outlet with other appliances.
- A damaged power cord must be replaced by a qualified professional.
- Unplug the treadmill when it is not in use.
- Do not touch the plug or wires with wet hands.
- In case of overheating or overload, the system shuts down automatically. Check the mains voltage and replace faulty parts if problems are found.

Use by children

- Children may use the equipment only under adult supervision.
- The equipment is not a toy.
- Children must not be near the treadmill without adult supervision.

Use by persons with disabilities or limited capacity

Persons with disabilities or limited capacity must be supervised by a doctor or a caregiver.

Clothing and footwear

Wear sportswear and athletic shoes. Avoid loose or baggy clothing that could get caught in the mechanisms and moving parts of the treadmill.

Installation site requirements

The owner is responsible for taking into account the space requirements around the treadmill during operation, voluntary and industry standards, fire safety regulations and other requirements of national legislation. Recommended minimum clearance around the equipment according to EU rules (since March 1, 2017): for access and passage, at least 0.5 m to the left, right and in front of the treadmill, and 2 m behind it.

Assembly requirements

Follow the assembly instructions and assemble the treadmill only on a level surface. Do not plug the treadmill in until assembly is complete. Make sure all assembly parts are present according to the parts list. If you have any difficulties with assembly, contact the seller.

Maximum user weight

Observe the maximum user weight stated in the specifications.

Prohibited actions

- Do not jump on the treadmill, rock it or run barefoot.
- Do not use the treadmill if assembly has not been fully completed or if internal mechanisms are exposed.
- Do not use the treadmill if it is defective or damaged.
- Do not use the treadmill if you feel unwell.
- Only one person may use the treadmill at a time.
- Do not use the treadmill under the influence of alcohol or drugs.
- Keep other people, pets and children away from moving parts during use — this may cause injury.

Operation and Safety

Warm-up

Always warm up your muscles before exercising.

Equipment inspection

Before each use, inspect the treadmill for wear of parts and moving components. Make sure the treadmill is fully functional and safe.

Running belt

To avoid injury, take special care when stepping onto or off the running belt.

Starting a workout and starting the belt

Stand on the side rails, press "Start" and wait until the belt starts moving at low speed. Then carefully step onto the belt. This reduces the load on the motor at startup.

Safety key

Always clip the safety key to your clothing. It will stop the treadmill in an emergency. Keep the key away from children.

Health monitoring


If you feel dizzy, have chest pain or feel unwell in any other way, stop exercising immediately and see a doctor. People over 35 or with chronic diseases are advised to consult a doctor before starting to exercise.

Disposal

The electronic components in this equipment are considered hazardous to the environment. Please dispose of them properly in accordance with national legislation.

Note: Please keep in mind that heart rate accuracy depends on a number of factors, including the user's physiology and age, how the equipment and the heart rate measurement system are used, external interference and other factors that may affect the accuracy of the collected and processed heart rate data. Therefore, non-medical equipment cannot guarantee accurate heart rate measurements.

PRODUCT COMPONENTS

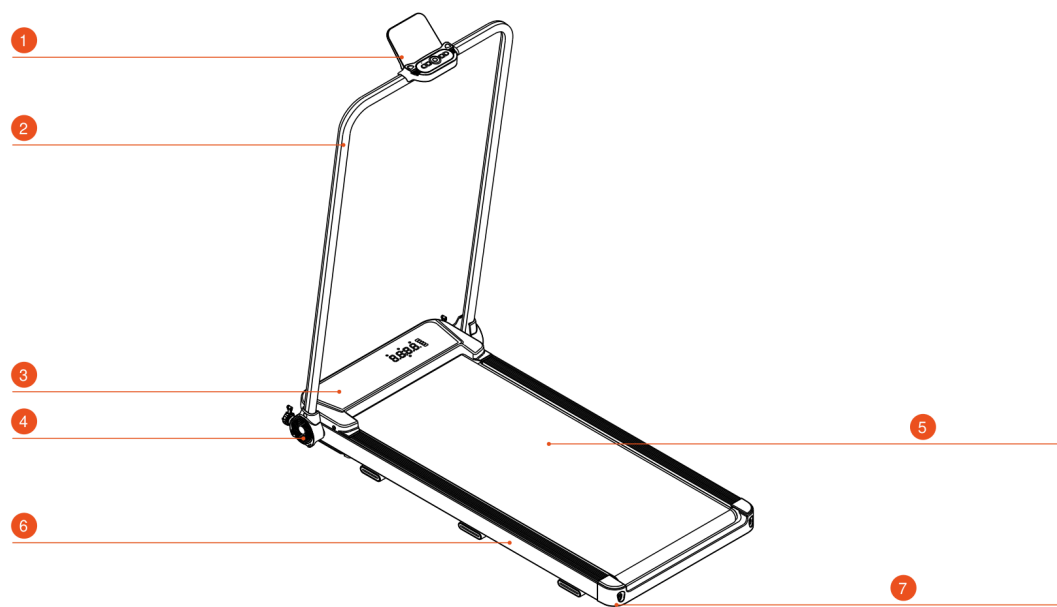

In the picture:

- 1. Phone holder
- 2. Upright
- 3. Motor cover
- 4. Protective cover
- 5. Running belt
- 6. Side trim
- 7. End cap

Main Parameters and Configuration List

Package Contents

No.	Item	Unit	Qty
1	Treadmill, assembled	set	1
2	Upright cover	set	1
3	Accessory bag	set	1
4	Bracket	pcs	1

Accessory Bag


No.	Item	Unit	Qty
1	Screws M4×14	pcs	1

No.	Item	Unit	Qty
2	Hex key 5 mm	pcs	1
3	Hex key 6 mm	pcs	2
4	Safety key	pcs	1
5	Silicone lubricant	pcs	1
6	User manual	pcs	1
7	Phillips washer-head self-tapping screw ST4×25	pcs	2

Scale: A ruler for measuring screw length is included in the printed manual. On a phone screen, the size does not match the actual size.

INSTALLATION INSTRUCTIONS

STEP 1

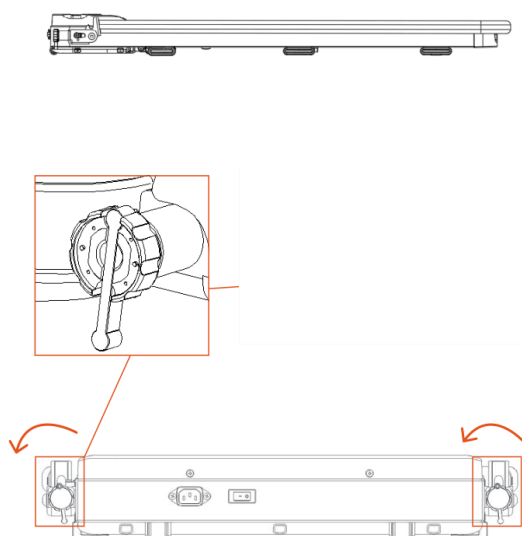


Take the treadmill out of the packaging and lay it flat on the floor. Loosen the knob assembly counterclockwise. The knob assembly is marked with a red frame.

Note: The knob lever can be moved forward and backward so that it is easier to hold when tightening or loosening the knob.

Warning! The knob assembly is fitted with a lever that helps you tighten or loosen the knob.

STEP 2

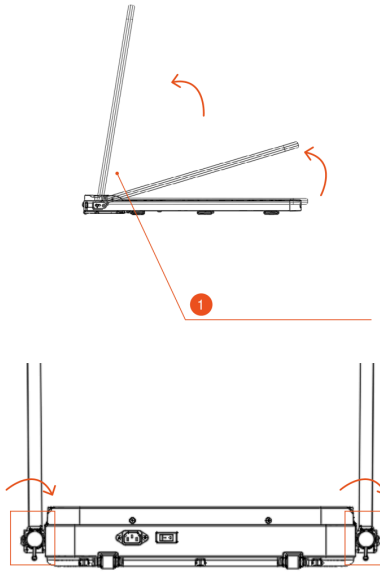


In the picture:

1. Avoid pinching

Raise the uprights. The treadmill will temporarily lock automatically.


Warning! Keep your fingers clear of the lower folding hinge to avoid pinching. Tighten the knob assembly clockwise to secure the uprights.

STEP 3

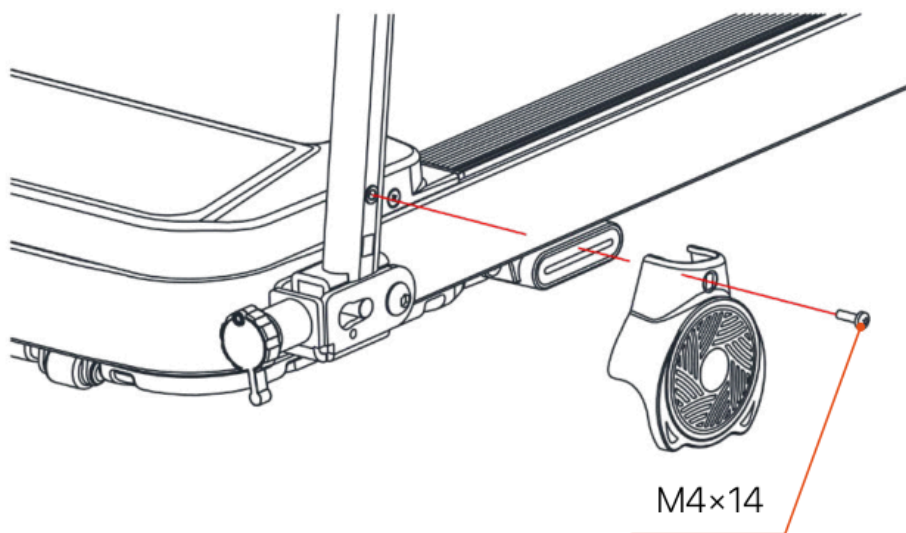

Attach the covers to the uprights with M4×14 screws using a Phillips screwdriver. Repeat the same operation on the left and right sides.


STEP 4

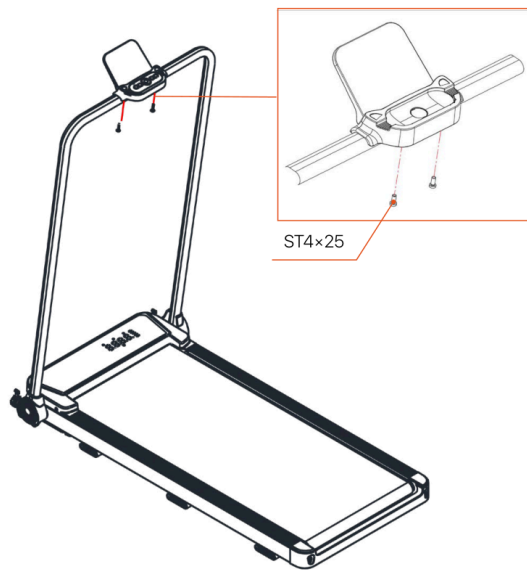

Attach the bracket to the uprights with ST4.2×25 self-tapping screws using a Phillips screwdriver.

Leveling the Treadmill to the Floor

If there is a gap between the treadmill and the floor, adjust the leveling feet in the middle and rear of the treadmill so that the front and rear of the treadmill are in contact with the floor.

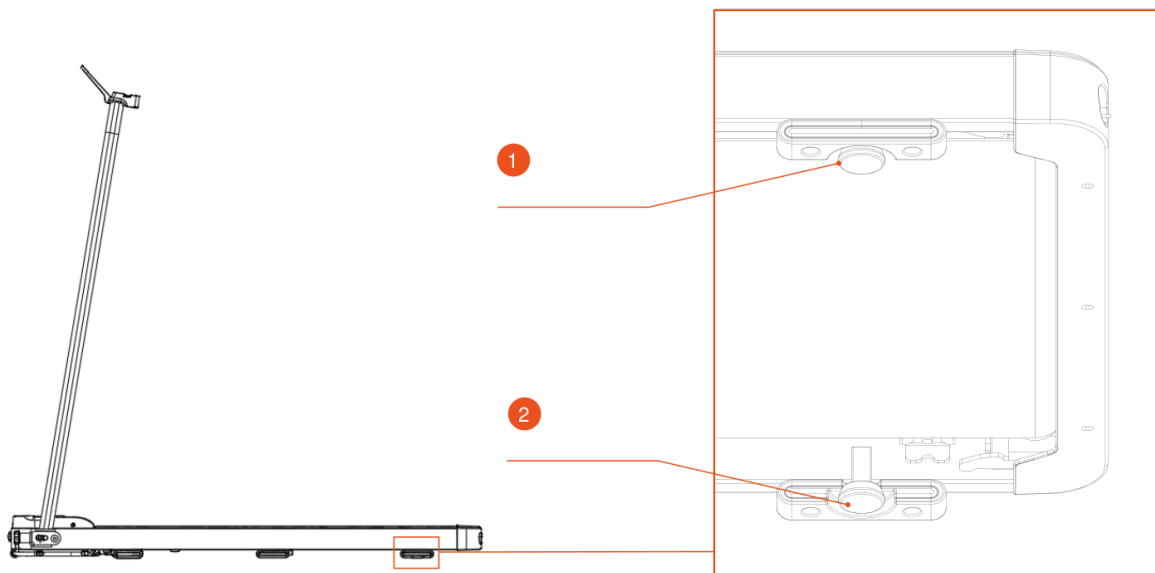

In the picture:

1. Adjustable support foot
2. Adjustable support foot

Warning! The treadmill will be unstable if there is a gap between the leveling feet and the floor.

OPERATING INSTRUCTIONS

Operating the Electric Walking Treadmill

- Connect the power cord and turn on the power switch. The switch is red. The indicator (1) will light up, a beep will sound, and then the display will turn on.




Note: The power switch is located on the front of the treadmill.

After turning on the power, press and hold the Start/Pause button on the remote control for about 7 seconds to perform individual pairing. Continuous beeps from the buzzer indicate successful pairing. If there are no continuous beeps, pairing has failed. Once paired successfully, the remote control can operate the treadmill, and no re-pairing is required for further use.


The remote control has the following buttons: Start/Pause (▶||), Stop (■), Speed +, Speed -, Mode (M), Vibration (↔).

The remote control can be placed on the bracket or held in your hand.

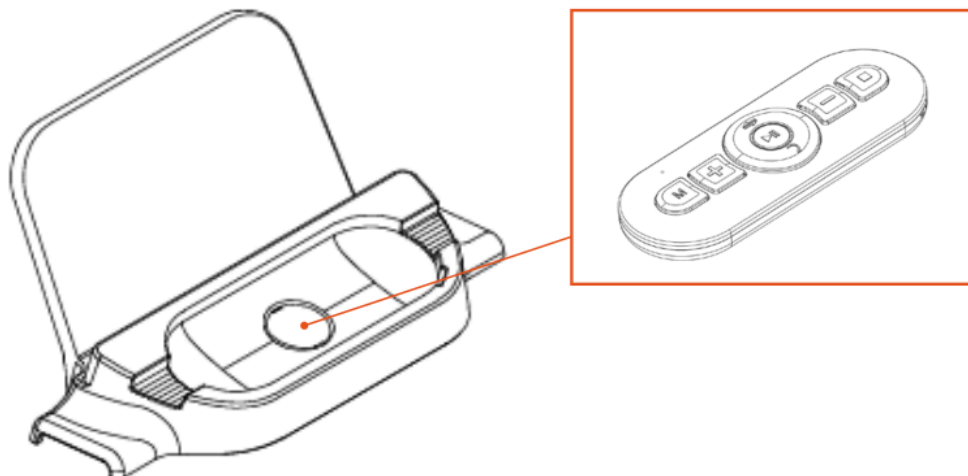


Replacing the Remote Control Battery

STEP 1

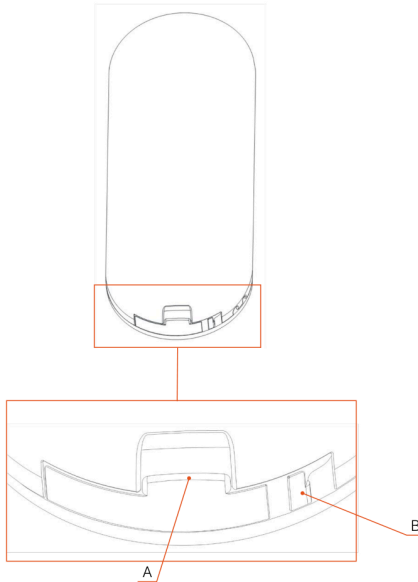

Hold the remote control in your right hand. Hook your left thumb into the small slot B and your left index finger into the long middle slot A, then pull outward to open the cover. See the figure.

STEP 2

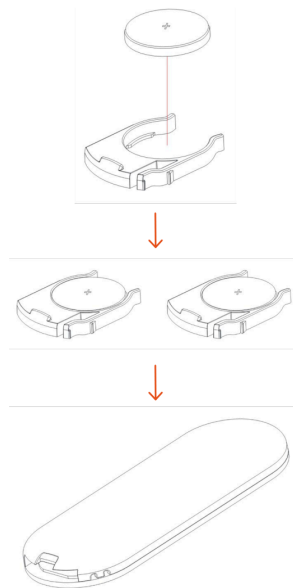


Place the button cell battery, printed side up, into the battery holder removed from the remote control, then insert the holder back into the remote. See the figure.

Two-Level Incline Adjustment of the Running Platform

Adjust the incline of the running platform by manually turning the adjusters on both sides at the front of the treadmill. The two adjusters on the left and right must be adjusted equally.

After adjusting, turn the adjustable support foot in the middle of the running platform to fine-tune it according to how level the floor is. Make sure all adjustable support feet are in contact with the floor. Otherwise, there may be extraneous noise during your workout and the user may be injured.

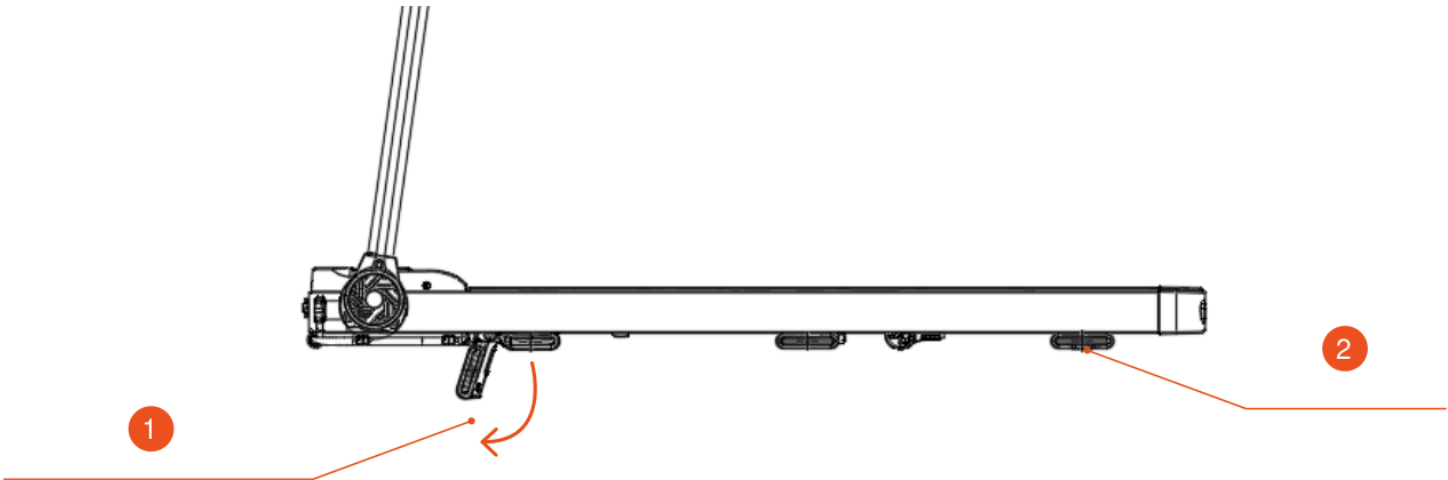

In the picture:

- 1. Turn the adjustable support foot
- 2. Adjustable support foot

Warning! It is recommended to use the treadmill on hard floors. When using it on soft surfaces such as carpets, increase the front incline of the running platform so that the treadmill does not rub against the soft material and is not damaged.

DISPLAY FUNCTIONS

Function	Description
Time Display	When the time indicator is lit, the current workout time is displayed.
Speed Display	When the speed indicator is lit, the current speed is displayed.
Distance Display	When the distance indicator is lit, the current distance is displayed.
Calorie Display	When the calorie indicator is lit, the current calorie count is displayed.
Vibration Mode Display	When one of the four vibration level indicators lights up, the corresponding vibration level is activated: Level 1 / Level 2 / Level 3 / Level 4 from top to bottom. The vibration function has a 5-minute time limit and stops automatically when the time is up.

Recommendation: Use vibration for 5–10 minutes to warm up before your workout. The maximum continuous vibration time is limited to 20 minutes. Avoid frequent and prolonged use of the vibration function, as this may shorten the service life of the motor.

Button Functions

Symbol	Name	Description
▶	Start/Pause	Press this button when the treadmill is stationary to start it and activate walking mode. Press + to increase the speed and - to decrease it. While the treadmill is running, press Start/Pause once to pause. Press Start/Pause again to resume. To stop the treadmill completely, press Stop to exit walking mode and enter standby mode.
■	Stop	Press this button during operation. The treadmill will stop and enter standby mode, and all data will be reset.
M	Mode Button M	In standby mode, press this button to cycle through three countdown workout modes: time, distance and calories.
↔	Vibration Button	In standby mode, press this button to activate the vibration function. The treadmill will enter vibration mode and Level 1 will be shown on the display by default. The indicators from top to bottom correspond to Level 1 / Level 2 / Level 3 / Level 4, with four different vibration frequency effects. Press + to switch up from Level 1 to Level 4; press - to switch down from Level 4 to Level 1. The vibration function runs on a 5-minute timer and stops automatically when the time is up. While the treadmill is running, press Start/Pause once to pause. Press Start/Pause again to resume. To stop completely, press Stop to exit vibration mode and enter standby mode.
	Speed +	Press this button during operation to increase the speed.
	Speed -	Press this button during operation to decrease the speed.

Important reminder: Use the vibration function only when the running platform is completely level, i.e. in the first incline position.

ERROR CODES

Error code	Error description	Troubleshooting
E1	Communication error	Possible cause: the connection between the electrical control unit and the console is broken. Check every connection point of the communication cable between the console and the lower controller and make sure all control wires are fully inserted. Check whether the connecting wire between the console and the controller is damaged; replace it if necessary.
E2	Motor not detected	Possible cause: check whether the motor wire is connected correctly and reconnect it. Check whether the motor is damaged or gives off an unusual smell; if it is faulty, replace the motor.
E5	Overcurrent protection	Possible cause: exceeding the permissible load causes excessive current and triggers the system self-protection; or part of the treadmill is jammed, which blocks the motor and leads to overload, excessive current and triggering of the system self-protection. Readjust the treadmill and restart it. In addition, check whether the motor makes unusual noise or gives off a burning smell during operation; replace the motor if necessary. Also check whether there is a burning smell from the controller; replace the controller if necessary. Or check whether the supply voltage differs from the required specification or is too low; check operation again at the correct voltage.
E6	Surge / undervoltage protection	Possible cause: check whether the supply voltage is below 50% of the normal value. Check operation again at the correct voltage. Check whether the controller gives off an unusual smell; replace the controller if necessary. Check whether the motor wire is connected correctly and reconnect it.
E8	Motor overtemperature protection, shutdown	Possible cause: an excessively high motor temperature triggers the built-in thermal switch. The control system displays error code E008 and stops operation to protect the motor from burning out. Once the motor temperature drops, the treadmill automatically returns to normal operation.

CARE, STORAGE AND MAINTENANCE

Important! To extend the service life of the treadmill, take a ten-minute break every 1–1.5 hours of operation.

Maintenance

Regular cleaning

Turn off the power before cleaning and use a minimal amount of water and soapy solution to prevent moisture from getting onto electrical parts.

Clean the running belt and other parts of the treadmill regularly. After each workout, wipe down the entire treadmill, including the console, with a mild soapy solution, then dry it thoroughly with a dry cloth. Simple care will keep the equipment looking great for many years. Do not use abrasive or rough brushes and cloths, as they may damage the surface of the equipment. Do not let cleaning agents or liquids get onto the surface of the equipment. Do not use harsh chemicals or solvents to clean the treadmill.

Note: This model is made of durable materials. The plastic parts are made of strong, chemically resistant ABS, the frame is made of high-strength steel with an industrial powder coating to protect against corrosion, and the metal parts have an anti-corrosion coating. However, keep in mind that sweat left on the surface of the treadmill can be highly aggressive to the materials if not removed promptly.

Lubricating the running belt

Use only lubricants recommended by the manufacturer, such as silicone treadmill lubricant. Other types and compositions of lubricants may damage the equipment.

Lubrication frequency

- Light use (less than 3 hours per week): lubricate once every 10 months.
- Heavy use (more than 7 hours per week): lubricate every 2-5 months.

Lubrication procedure



Lift the running belt and spread the lubricant evenly along the entire length of the belt.

After applying the lubricant, run the treadmill at 4–5 km/h and walk on it for a few minutes so that the lubricant spreads evenly over the deck.

Avoid over-lubrication

Do not apply too much lubricant, as this can make the belt too slippery and dangerous. Remove excess lubricant with a clean towel.

Running Belt Adjustment

Check and adjust the tension and alignment of the running belt to prevent wear and ensure safe operation.

Checking belt alignment

Make sure the treadmill is placed on a level surface. Run the belt at 3–8 km/h and watch how it moves. If the belt drifts to the left or right, use the adjustment bolts to correct its position.



In the picture:

1. Belt drifting to the left
2. Belt drifting to the right

Belt drifting to the left

- Turn the left adjustment bolt 1/2 turn clockwise.
- Then turn the right adjustment bolt 1/2 turn counterclockwise.
- Check the belt position after 1–2 minutes. If the belt has not returned to the center, repeat the procedure.

Belt drifting to the right

- Turn the right adjustment bolt 1/2 turn clockwise.
- Then turn the left adjustment bolt 1/2 turn counterclockwise.
- Check the belt position after 1–2 minutes. Repeat the adjustment if necessary.

Adjusting belt tension

- If the belt is too loose, it may slip during operation. To check the tension, run the treadmill at 1 km/h and press lightly on the belt with your foot.
- If the belt stops while the motor and rollers keep running, the tension is too loose and must be tightened.
- Turn the adjustment bolts at both ends of the belt 1/2 turn clockwise. Make sure you turn both bolts the same number of times for even tension.
- Check the tension again and make sure the belt does not slip but is not overtightened.

Avoid overtightening

- Do not overtighten the running belt, as this puts excessive pressure on the front and rear roller bearings, causing squeaking and accelerated wear.
- With correct tension, you can slightly lift the edges of the belt by 50–70 mm on both sides.

Storing the Treadmill

Recommended storage and operating conditions

- Temperature: +10...+35 °C.
- Humidity: 50–75%.
- Acclimatization: if the treadmill has been stored at low temperature or high humidity (there are signs of condensation), keep it under normal conditions for at least 2–4 hours before use. Only then may you start using the treadmill.

TRAINING TIPS AND RECOMMENDATIONS

Warm-up and Cool-down

A successful exercise program consists of three parts: warm-up, cardio training and cool-down.

The warm-up is a very important part of a workout. It should be done before every workout. The warm-up helps warm up the body, stretch the muscles and let the body adapt to more intense exercise. Repeating the warm-up at the end of the exercise can help relieve muscle soreness.

We suggest doing appropriate warm-up and cool-down exercises according to the following scheme:



Head rolls

First tilt your head toward your right shoulder, stretch your neck and rotate your head once clockwise and once counterclockwise; then tilt your head toward your left shoulder and make one counterclockwise rotation. Repeat.



Shoulder lifts

Raise your left shoulder and make 5 backward rotations; then raise your right shoulder and make 5 backward rotations, alternating sides.



Side stretch

Raise your arms above your head, then grasp your right wrist with your left hand and reach upward until you feel your right arm fully stretched. Hold for 5 seconds before switching to the other arm.



Quadriceps stretch

Holding onto a wall with your right hand for balance, pull your left foot back with your left hand, bringing the heel as close to your buttock as possible. Hold for 15 seconds, then repeat with the other leg.



Inner thigh stretch

Sitting on the floor, put the soles of your feet together, clasp them with both hands and pull them in as close to your body as possible. Slowly press down on both heels and hold this position for 15 seconds.



Toe touch

Slowly bend forward, relax your back and shoulders and reach for your toes. Bend as low as you can and hold the position for up to 15 seconds.



Hamstring stretch

Sit down, straighten your right leg and bend your left leg. Hold your left ankle with your left hand and pull it inward so that your left foot is as close to your body as possible, with the sole against the inner side of your right thigh. Then lean your body forward and reach both hands toward your toes — the deeper the stretch, the better. Hold this position for 15 seconds, then switch legs.



Calf stretch

Lean against a wall with both hands, tilt your body at a 45-degree angle to the floor and alternately move your left and right legs back, as if walking.

WARRANTY

The translation of this section has not been reviewed yet. The official text is in Russian.

Genau guarantees the high quality and reliability of its products. We strive to offer only the best, which is why all of our equipment comes with a warranty.

Attention! Find the official A4 warranty card in the box and keep it for the entire period of use of the equipment.

Note: If you did not find the warranty card in the box, please contact the service center.

Warranty Terms

1. The warranty period starts from the date of sale.
2. The warranty covers defects caused by manufacturing faults or defective materials.
3. Warranty service is carried out at authorized service centers.
4. If the product breaks down during the warranty period, the customer must bring this warranty card and the complete product to a service center for diagnostics and repair.
5. If the warranty claim is confirmed, the product will be repaired or replaced free of charge.

6. The warranty does not cover the following cases:

- mechanical damage caused by improper use or transportation;
- damage caused by liquids, fire, chemicals or other external factors;
- failures caused by not following the operating instructions;
- modifications to the design or repairs carried out by unauthorized persons without the approval of the Service;
- consumables and components with a limited service life (belts, batteries, etc.).

Warranty claims

To receive warranty service, the customer should contact the seller (the place where the equipment was purchased).

[Full Genau warranty card](#)

SPECIFICATIONS

Parameter	Value
Rated voltage	AC 220–240 V
Rated frequency	50–60 Hz
Motor power	2.25 hp
Speed	1.0–10 km/h
Running belt size	950×400 mm
Max. user weight	110 kg
Functions	Running

Manufacturer: Zhejiang Lijiujia Sports Equipment Co., Ltd. No.88 Yuegui South Road, Xicheng Street, Yongkang, Zhejiang, China.

SERVICE

For questions about assembly, operation and warranty, please contact Genau service in Kyrgyzstan.

Genau GmbH LLC (ОсОО «Генау ГМБХ»), Kyrgyzstan. Phone: +996 778 639 000

[Official website genau.kg](#)